

Work Order ID 127461

December-17-14 1:26:50 PM

Shf 12/24 9/01

127461

Page 1

Item ID: D350-567-141

Accept

N900040100

Setup Start *NS1*

Revision ID:

Item Name: Floor Window Close Out

Stop *NS2*

Start Date: 1/13/15 Start Qty: 2.00

2

Cust Item ID:

Required Date: 1/23/15 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals: Process Plan: ML5 Date: 14-12-22

Tooling:

Date:

Run Start *NR1*

QC: Date:

SPC (Y/N):

Date:

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

DSI 9590

E

100

Document Control

0.00

100

DC

DOCUMENT CONTROL

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-567-141 CHG003

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging

120

QC4- 100% Inspect kits for completeness

0.00

120

QC

Memo

0.00

Quality Control

ML5 1503-02

2x

DAS
46
9-89

MAR 02 2015

2x

DAS
28
9-89

2x

DAS
46
9-89

MAR 02 2015

Smb
avg per ECN
15-525
MF 15-2-11

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Work Order ID 127461

127461

Page 2

December-17-14 1:26:50 PM

Item ID: D350-567-141 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Floor Window Close Out
 Start Date: 1/13/15 Start Qty: 2.00 *2* Cust Item ID:
 Required Date: 1/23/15 Req'd Qty: 2.00 *2* Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	Packaging	0.00				(2x)	DAS 46 9-89	MAR 02 2015	
130									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D350-567-141 Location: <u>FG 033</u>								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

MCJ 15-03-03

(Handwritten signature)

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:26:46 PM

Page 1

Work Order ID: 127461

127461

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 1/13/15

Required Date: 1/23/15

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP REV:A 11.11.09 new issue DD verf:JLM
12.01.23 AS PER ECN12-511 DD VERF:EC
AS PER ECN12-537 DD VERF:EC
DSI9590 REV.E DD VERF:JLM
IPP REV:B
IPP REV:C 12.03.05
IPP REV:C 13.04.01 AS PER

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3802-1 *D3802-1* Windows Seal (\$ Per Foot)	DAS 46 9-89 DAS 06 9-89	Manufactured	No			110	f	214.0000	2	4			
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST421				214					
					16673			6					
					122222			208					
D4434-041 *D4434-041* Fwd Bracket Assembly	DAS 46 9-89	Manufactured	No			110	Each	1.0000	1	2			
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST623				1					
					126969			1					
D4435-045 *D4435-045* T/R Bellcrank Cover Assembly	DAS 46 9-89	Manufactured	No			110	Each	5.0000	1	2			
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST620				5					
					124198			5					
D4434-041 x 11 per Kit B 129467 x 2 per ECN 15-525 mmf 15-2-11 DAS 46 9-89													

Shp
JAN 27 2015

Shp
JAN 27 2015

Shp
JAN 27 2015

DAS
06
9-89
DAS
28
9-89
DAS
06
9-89
DAS
28
9-89
DAS
06
9-89
DAS
28
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="width: 20%;">Skid-tube ☐</td> <td style="width: 20%;">Crosstube ☐</td> <td style="width: 20%;">Water Jet ☐</td> <td style="width: 20%;">Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge	☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--	--

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:26:46 PM

Page 3

Work Order ID: 127461

Parent Item: D350-567-141

Parent Item Name: Floor Window Close Out

127461

D350-567-141

Start Date: 1/13/15

Required Date: 1/23/15

Start Qty: 2.00

Required Qty: 2.00

AN525-10R6

Purchased

No

110

Each

202.0000

2 4

AN525-10R6

DAS

46

Screw

9-89

Location

Loc Qty

Loc Code

ST273A

100

M129390

100

ST329

102

M130325

102

AN525-832R7

Purchased

No

110

Each

87.0000

2 4

AN525-832R7

DAS

46

Screw

9-89

Location

Loc Qty

Loc Code

GA

72

m129909

72

ST329

15

m127363

15

MS21042L06

Purchased

No

110

Each

353.0000

7 14

MS21042L06

DAS

46

Nut

9-89

Location

Loc Qty

Loc Code

ST305

353

m129499

153

m130325

200

**

**

**

Smb

JAN 27 2015

Smb

JAN 27 2015

Smb

JAN 27 2015

DAS
06
9-89

DAS
28
9-89

DAS
28
9-89

DAS
28
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:26:47 PM

Page 4

Work Order ID: 127461

Parent Item: D350-567-141

Parent Item Name: Floor Window Close Out

127461

D350-567-141

Start Date: 1/13/15

Required Date: 1/23/15

Start Qty: 2.00

Required Qty: 2.00

MS21042L08

Purchased

No

110

Each

1,295.000

2

4

MS210421 08

DAS

46

Nut

9-89

Location

Loc Qty

Loc Code

CA

101

m129682

101

ST304

1194

123900

16

m128401

578

m130325

600

MS21042L3

Purchased

No

110

Each

998.0000

5

10

MS210421 3

DAS

46

Nut

9-89

Location

Loc Qty

Loc Code

FP001

489

M130922

489

GA

33

M128754

33

ST305

473

M130799

473

ST307

3

123900

3

**

Smb

JAN 16 2015

JAN 27 2015

DAS
28
9-89

**

Smb

JAN 27 2015

DAS
46
9-89

M131264

10

DAS
28
9-89

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:26:47 PM

Page 5

Work Order ID: 127461

Parent Item: D350-567-141

Parent Item Name: Floor Window Close Out

127461

D350-567-141

Start Date: 1/13/15

Required Date: 1/23/15

Start Qty: 2.00

Required Qty: 2.00

MS21059L3

Purchased

No

110

Each

237.0000

25

4

MS21059L3

DAS
46
9-89

Nut Plate

**

DAS
27
9-89

JAN 26 2015

DAS
28
9-89

Location

Loc Qty

Loc Code

CA

16

M129682

16

GA

164

M130823

164

ST303

57

M130823

57

MS35206-229

Purchased

No

110

Each

97.0000

14

MS35206-229

DAS
46
9-89

Screw

**

DAS
27
9-89

JAN 26 2015

DAS
28
9-89

Location

Loc Qty

Loc Code

ST277

97

M131078

97

NAS1149F0332P

Purchased

No

110

Each

3,406.000

12

24

NAS1149F0332P

DAS
46
9-89

Washer

**

DAS
27
9-89

JAN 26 2015

DAS
28
9-89

Location

Loc Qty

Loc Code

GA

222

122063

222

ST260a

3000

m130325

2000

m131026

1000

st268

184

m127831

184

DAS
28
9-89

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="width:15%;">Skid-tube ☐</td> <td style="width:15%;">Crosstube ☐</td> <td style="width:15%;">Water Jet ☐</td> <td style="width:15%;">Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

December-17-14 1:26:47 PM

Page 6

Work Order ID: 127461

127461

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 1/13/15

Required Date: 1/23/15

Start Qty: 2.00

Required Qty: 2.00

NAS1149FN616P

Purchased

No

110

Each

188.0000

14 28

2x *NAS1149FN616P*

DAS

46

WASHER

9-89

Location

Loc Qty

Loc Code

st268

188

188

M131026

110

Each

822.0000

2 4

NAS1149FN816P

Purchased

No

2x *NAS1149FN816P*

DAS

46

WASHER

9-89

Location

Loc Qty

Loc Code

st268

822

822

117316

**

**

DAS

27

9-89

JAN 26 2015

DAS

28

9-89

DAS

27

9-89

JAN 26 2015

DAS

28

9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="width: 20%;">Skid-tube ☐</td> <td style="width: 20%;">Crosstube ☐</td> <td style="width: 20%;">Water Jet ☐</td> <td style="width: 20%;">Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design ☐									
Doc/Data ☐									
Equip/Tooling ☐									
Handling/Pre ☐									
Material ☐									
Operator ☐									
Offset/Setup ☐									
Process ☐									
Supplier ☐									
Training ☐									
Transport ☐									
Unapproved ☐									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. E OR EARLIER
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 2 OR EARLIER
REF CANADIAN STC: SH92-18
FAA STC: SH989NE
FAA STC: SH990NE

1.0 Purpose

The purpose of this service instruction is to add the D350-567-141/-143/-145 Close-out Kits, which are intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141/-143/-145 Floor Window Close-out Kits provide a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1. The -143 Kit is identical to the -141 Kit with the exception of the D4971-041 T/R Bellcrank Cover Assy which replaces the D4435-045 T/R Bellcrank Cover Assy on aircraft fitted with energy attenuating seats. The -145 Kit is similar to the -143 Kit but is only kit compatible with the AS350 B3e aircraft.

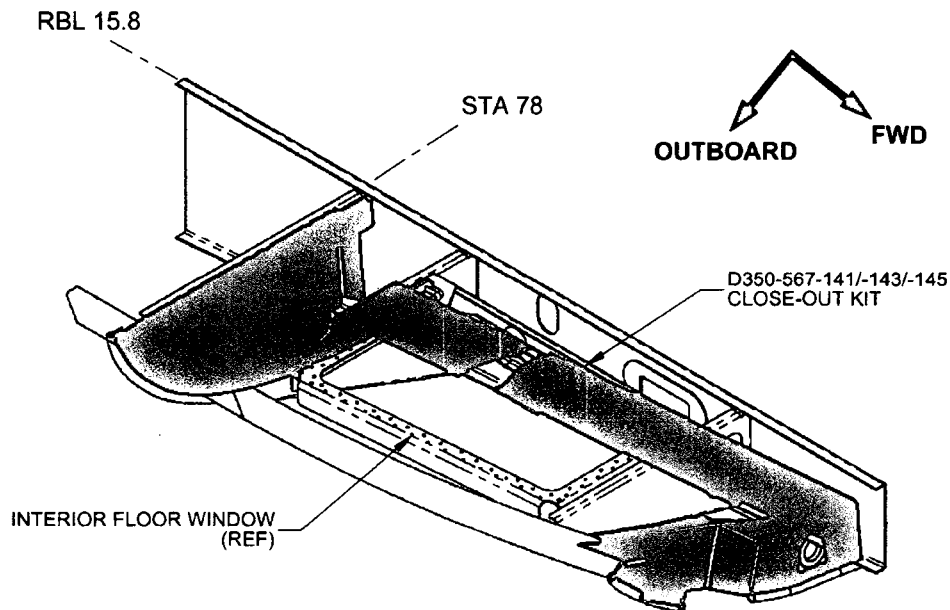


Figure 1. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

E	ADD -143/-145 KITS	RF	14.03.20
D	CLARIFY FIGURES 3-12	VS	13.09.11
C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN616P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 1 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

E

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kG	1.66 m	2.94 m-kG


4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 - OK to remove D3295-041
 - D350-567-031 - OK to remove D3212-1
 - D350-567-011 - OK to remove D2214
 - D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

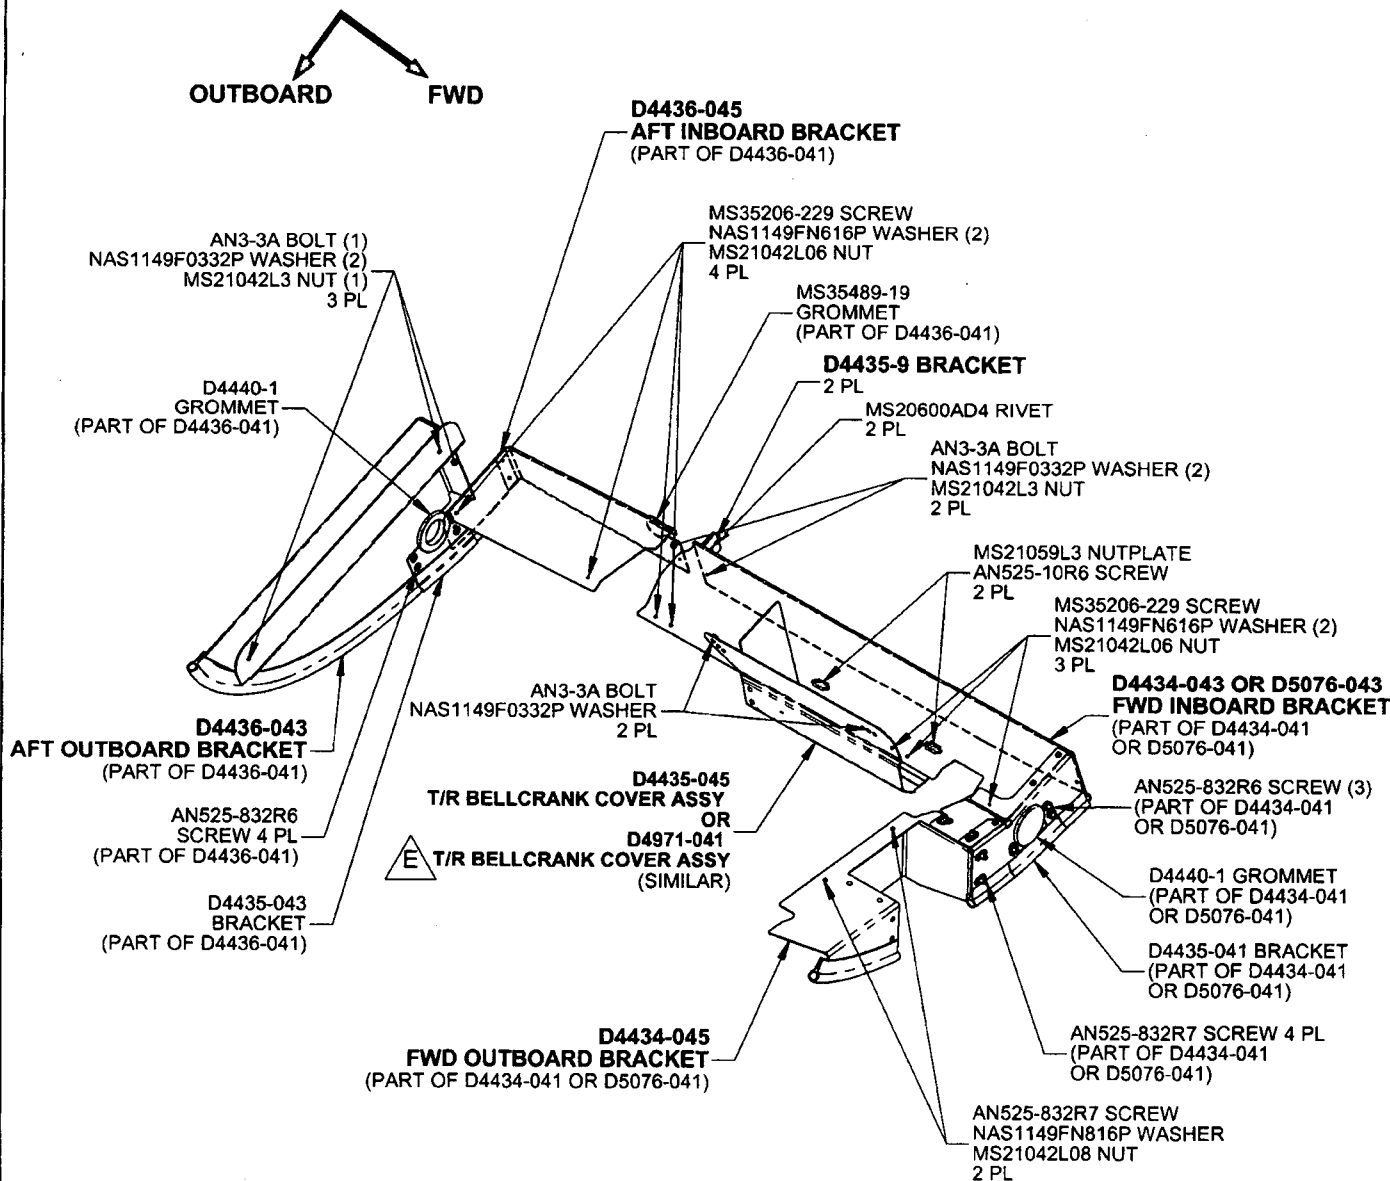


Figure 2. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 3 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or cleco clamps. Before drilling holes:

- a) Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
- b) Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.

4.2 Temporarily install D4434-043/D5076-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.

4.3 For -143 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4971-041 T/R Bellcrank cover as shown in Figure 13b. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.



4.4 For -145 installations, if aircraft is equipped with Collective Circuit Breaker Board box, use D5076-043 Fwd Inboard Bracket as shown in Figure 13c. Install D4971-041 T/R Bellcrank cover as shown in Figure 13c. Note: Confirm the D5076-3 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.5 Drill out rivets holding plastic wire bundle stand offs. Transfer drill $\varnothing 0.144$ holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x $\varnothing 0.144$ holes to D4434-043/D5076-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x $\varnothing 0.144$ holes for D4434-043/D5076-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043/D5076-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.

4.6 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.

4.7 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x $\varnothing 0.129$ holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.

4.8 Drill a pilot hole from D4435-9 Bracket to the D4434-043/D5076-043 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to $\varnothing 0.191$. Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.

4.9 Transfer drill 2 x $\varnothing 0.144$ holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x $\varnothing 0.144$ holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 screws, NAS1149FN816P washer and MS21042L08 nuts.



4.10 FOR D350-567-141 KIT

- a) Align D4435-045 T/R Bellcrank Cover Assy with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12a.
- b) Transfer drill 2 x $\varnothing 0.098$ holes from D4435-045 T/R Bellcrank Cover Assy to D4434-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12a and Figure 13a. Install D4435-045 T/R Bellcrank Cover Assy using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12a and Figure 13a.




4.11 FOR D350-567-143/-145 KIT

- a) Remove the D4972-041 Side Plate Assy from the D4971-041 T/R Bellcrank Cover Assy and retain fasteners.
- b) Align D4971-1 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12b.
- c) Bond D4730-020-030 Velcro to back of D4971-1 T/R Bellcrank Cover as shown in Figure 12b using CB 200 adhesive.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO #01-O-01

APPROVED

BY: 
D. SHEPHARD (DE #02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD	
DRAWN	RF	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

- d) Transfer drill 2 x $\varnothing 0.098$ holes from D4971-1 Cover Plate to D4434-043/D5076-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043/D5076-043 Fwd Inboard Bracket as shown in Figure 13b/13c. Install D4971-1 Cover Plate using AN525-10R6 screws and D4730-020-030 Velcro per Figure 12b and Figure 13b/13c.
- e) Re-install the D4972-041 Side Plate Assy using the retained fasteners.
- 4.12 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.13 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.14 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.15 Ensure there is a gap between the components of the D350-567-141/-143/-145 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-141 /-143/-145 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 5 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

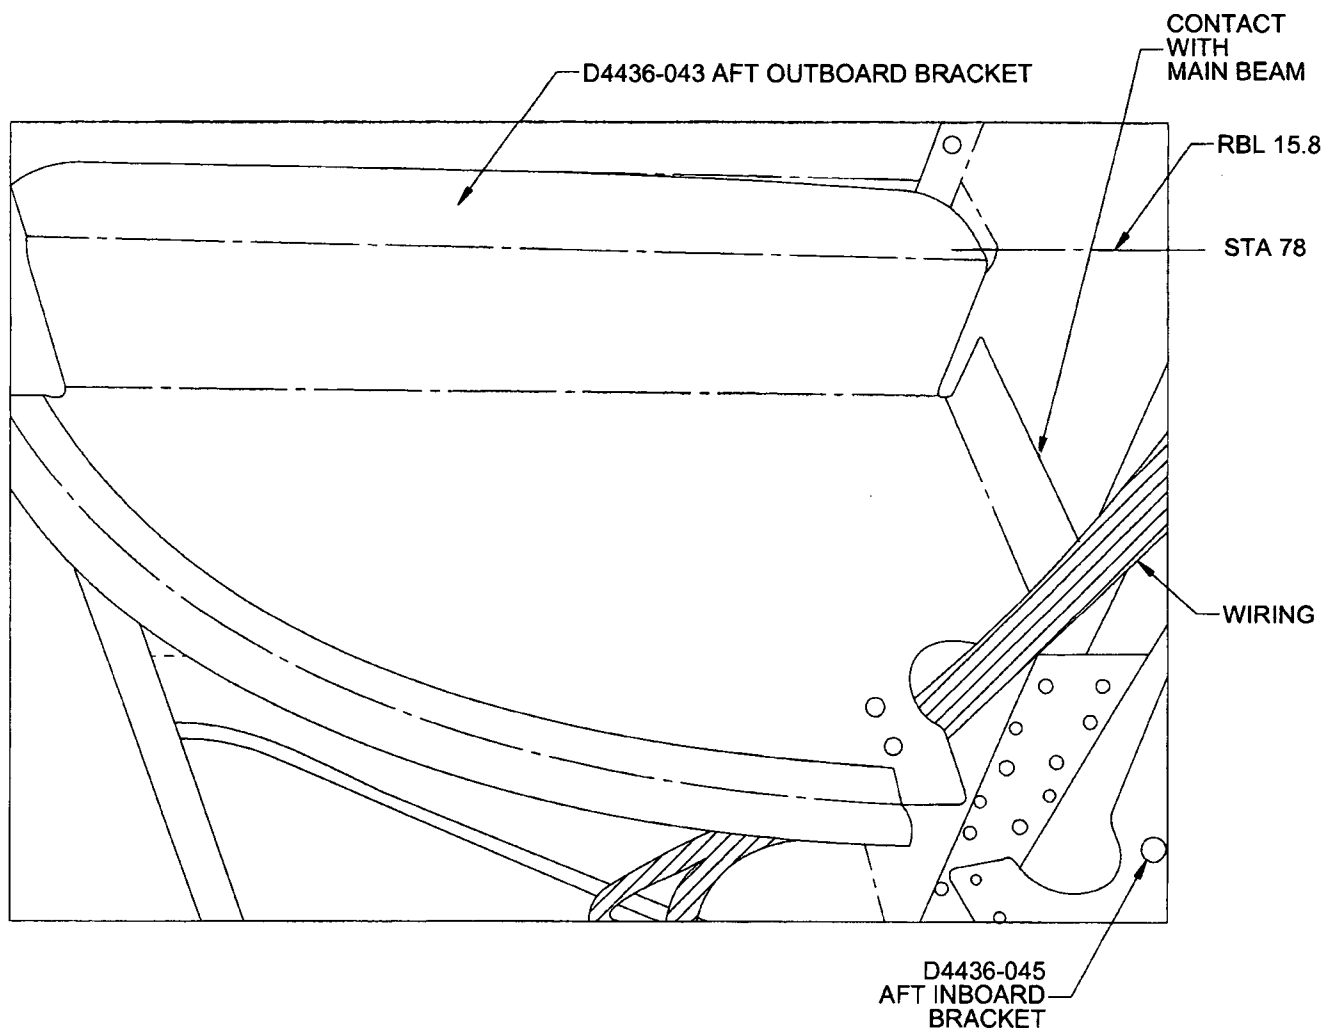


Figure 3. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. E
MFG. APPR.	N/A	SHEET 6 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

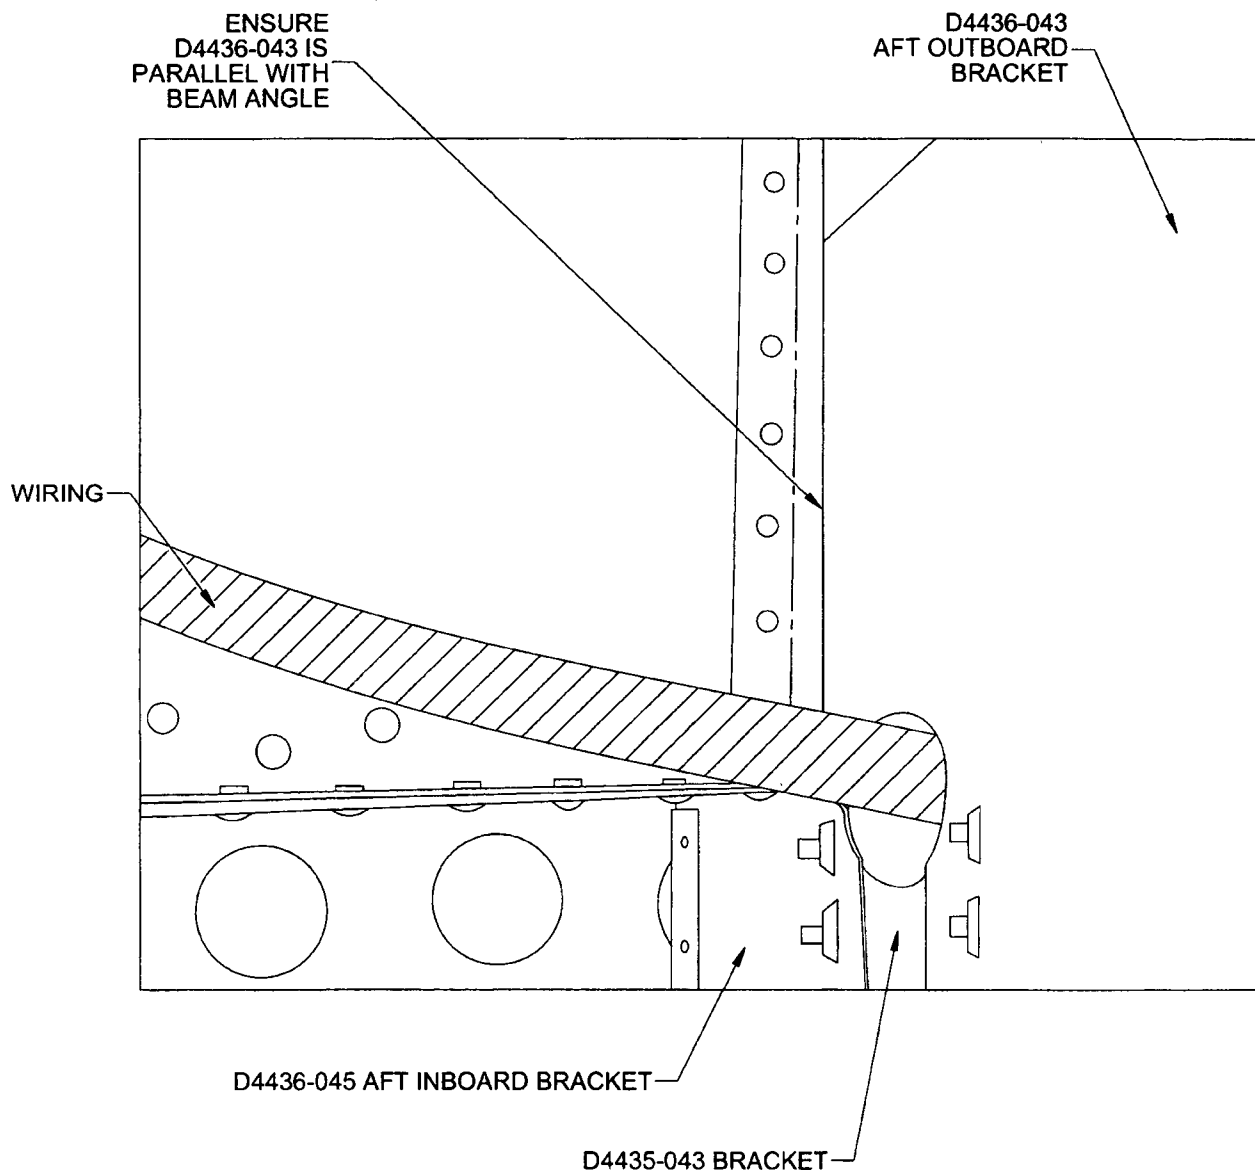



Figure 4. D4436-043 & D4435-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 7 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

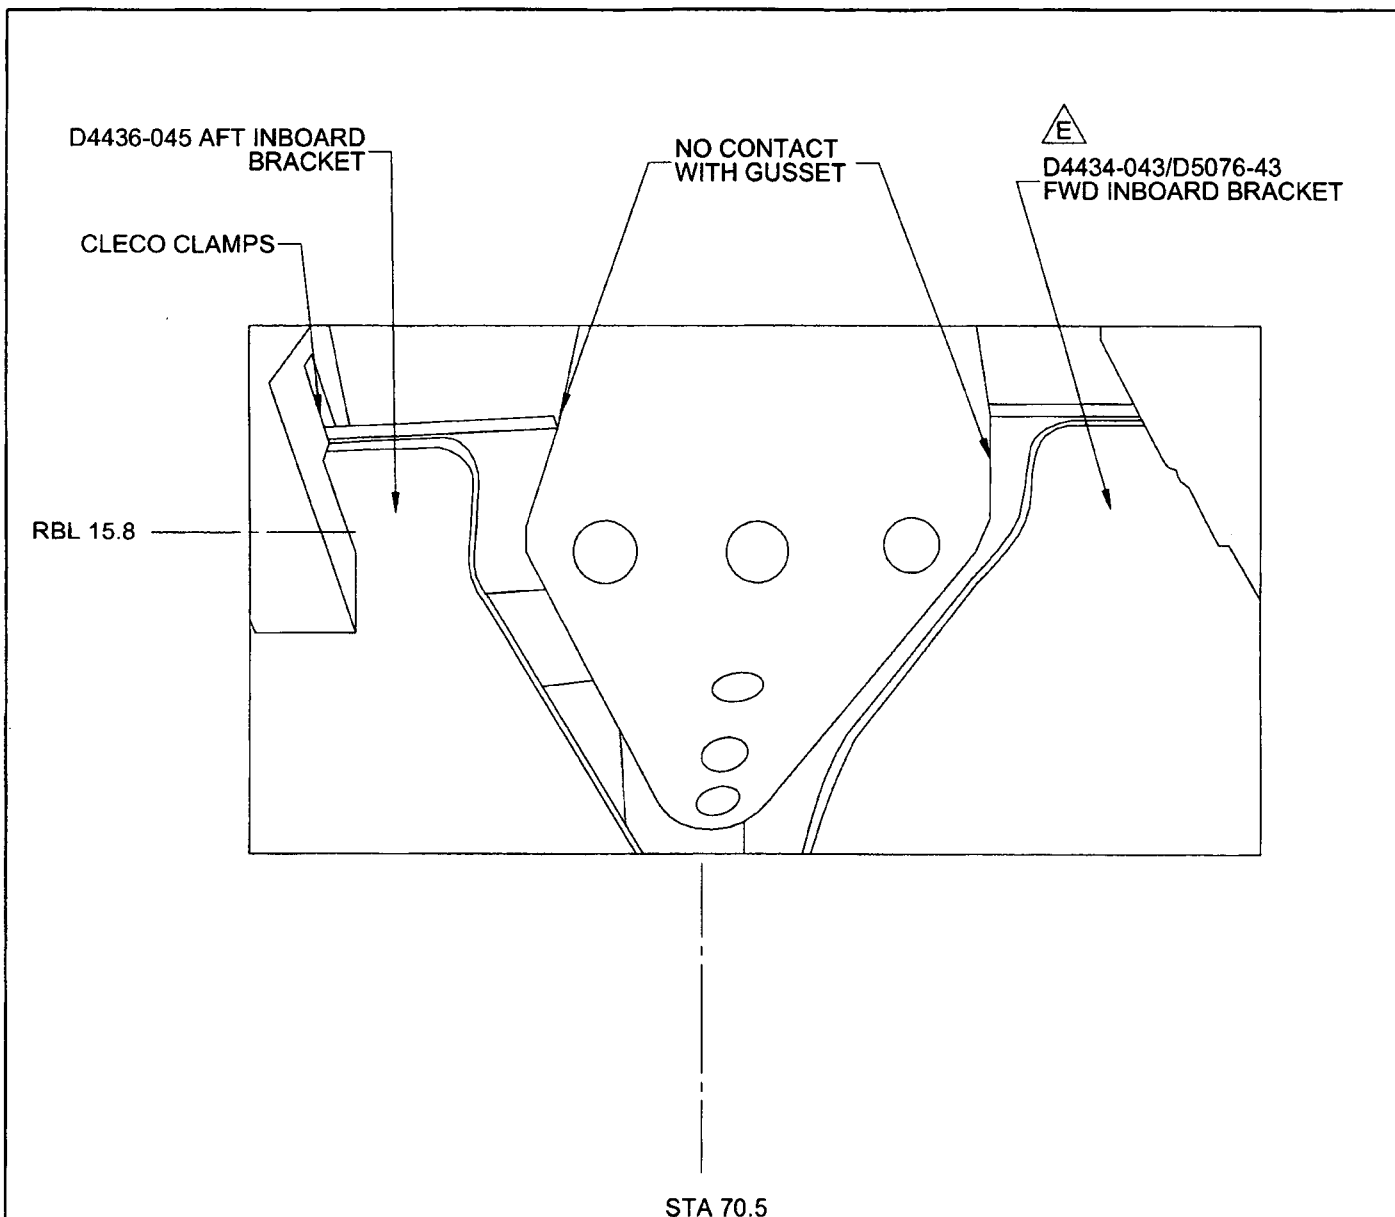

E Figure 5. D4436-045 & D4434-043/D5076-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. E
MFG. APPR.	N/A	SHEET 8 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

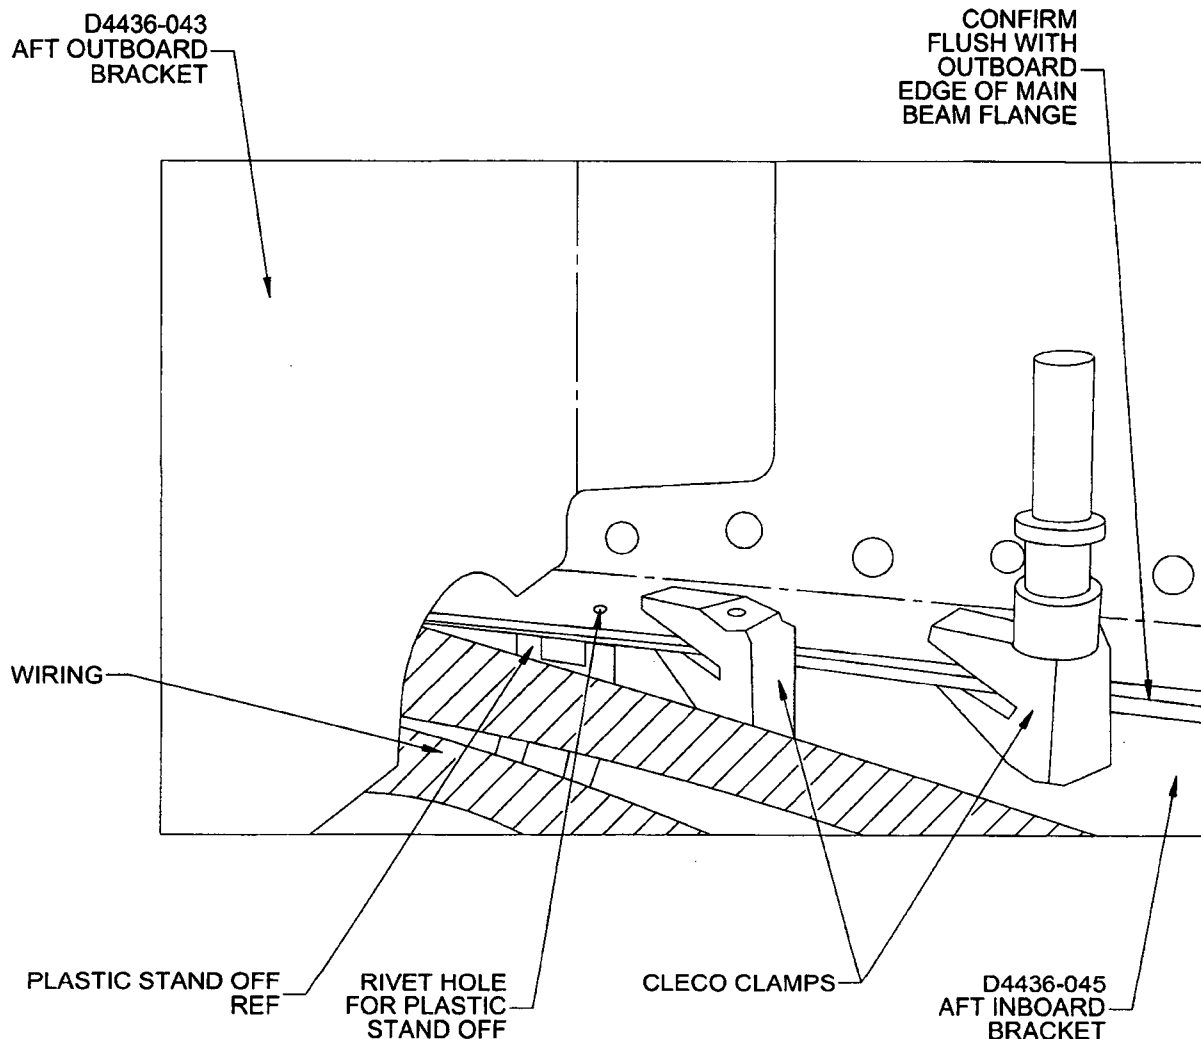


Figure 6. D4436-043 & D4436-045 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	RF	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 9 OF 19
APPROVED	RF	TITLE	SCALE
DE APPR.	RF	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

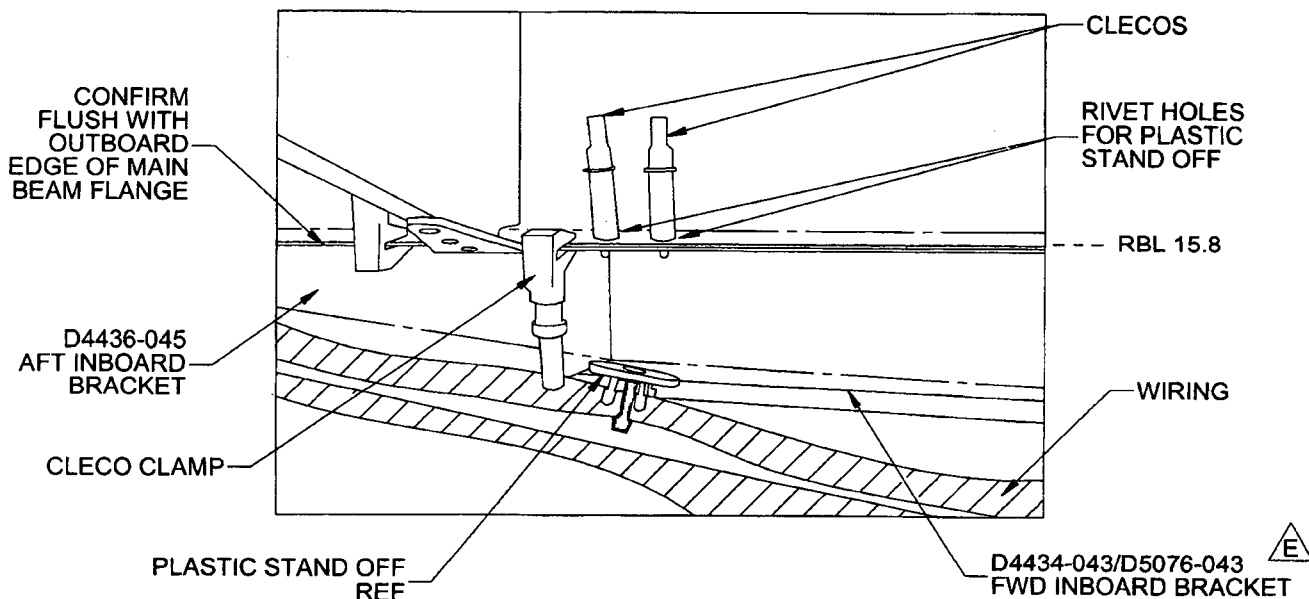


Figure 7. D4434-043/D5076-043 & D4436-045 Brackets Installation

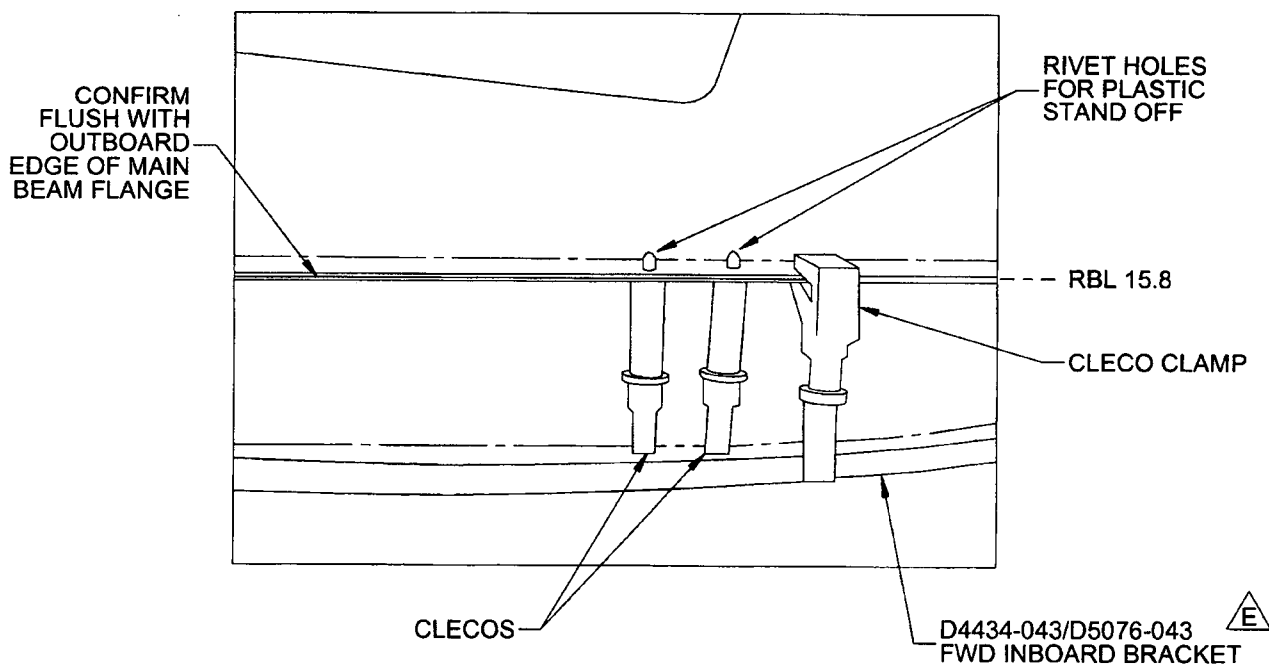


Figure 8. D4434-043/D5076-043 Fwd Inboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD	
DRAWN	RF	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 10 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

INSTALL
D4436-043
AFT OUTBOARD BRACKET
USING
AN3-3A BOLT (1)
NAS1149F0332P WASHER (2)
MS21042L3 NUT (1)
3 PL

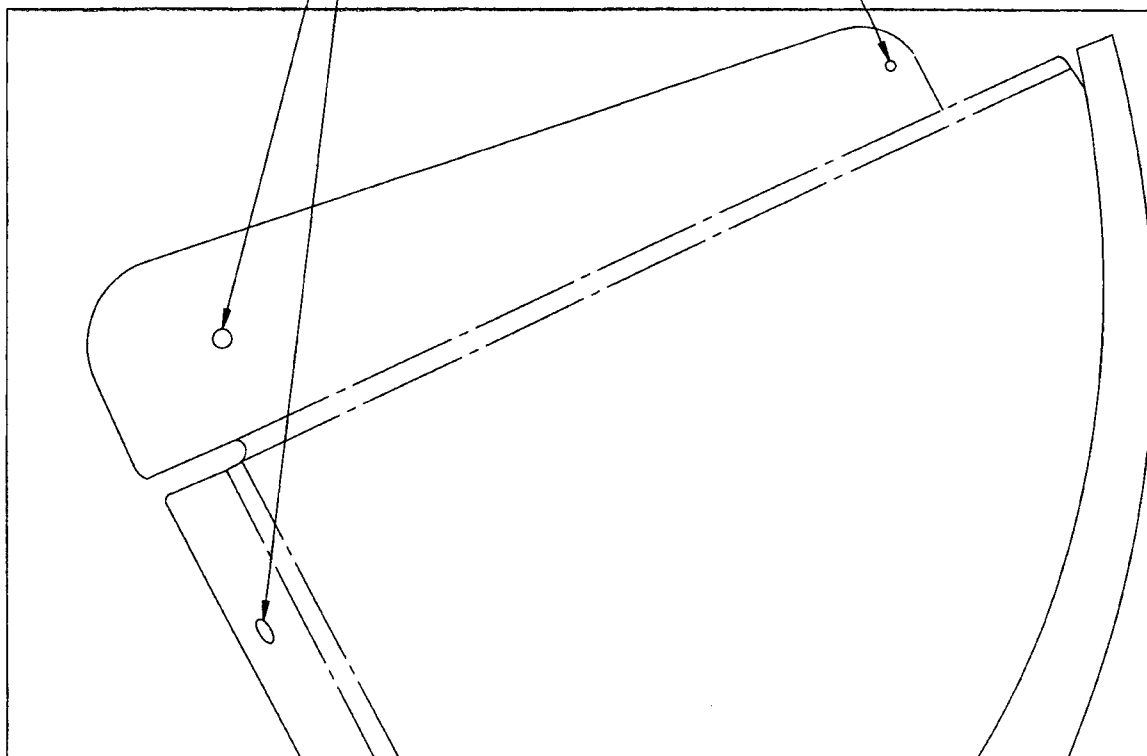


Figure 9. D4436-043 Aft Outboard Bracket Installation


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. E
MFG. APPR.	N/A	SHEET 11 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

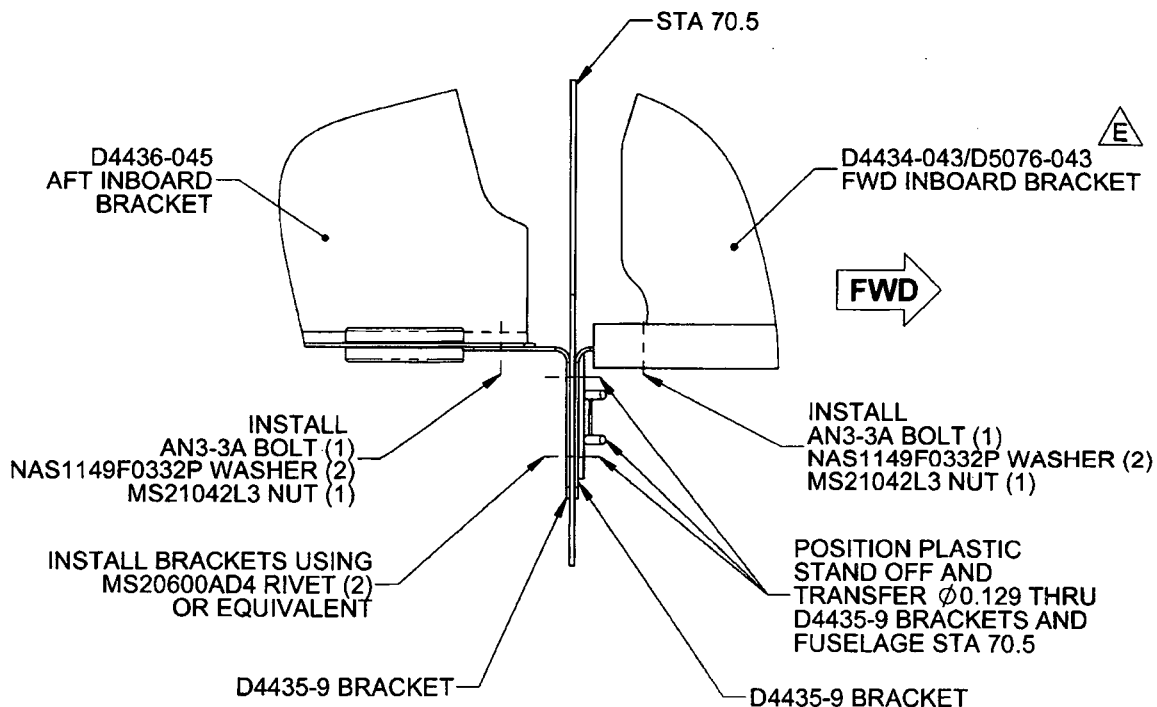

LOOKING UP AT STA 70.5

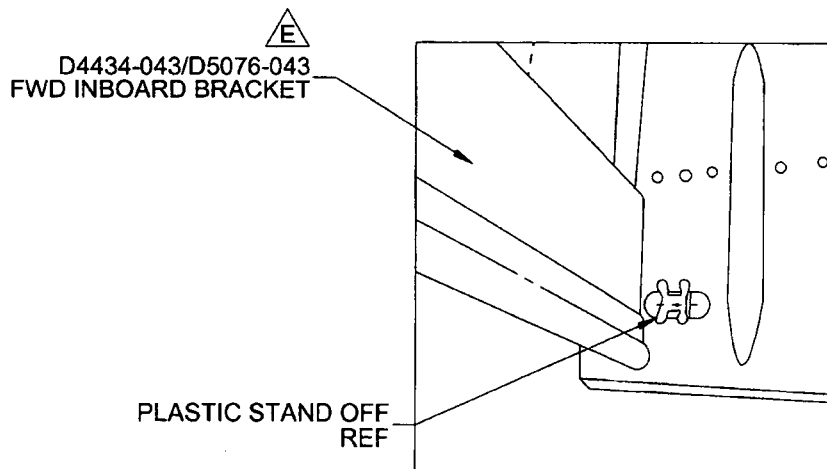


Figure 10. D4434-043/D5076-043 and D4435-9 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

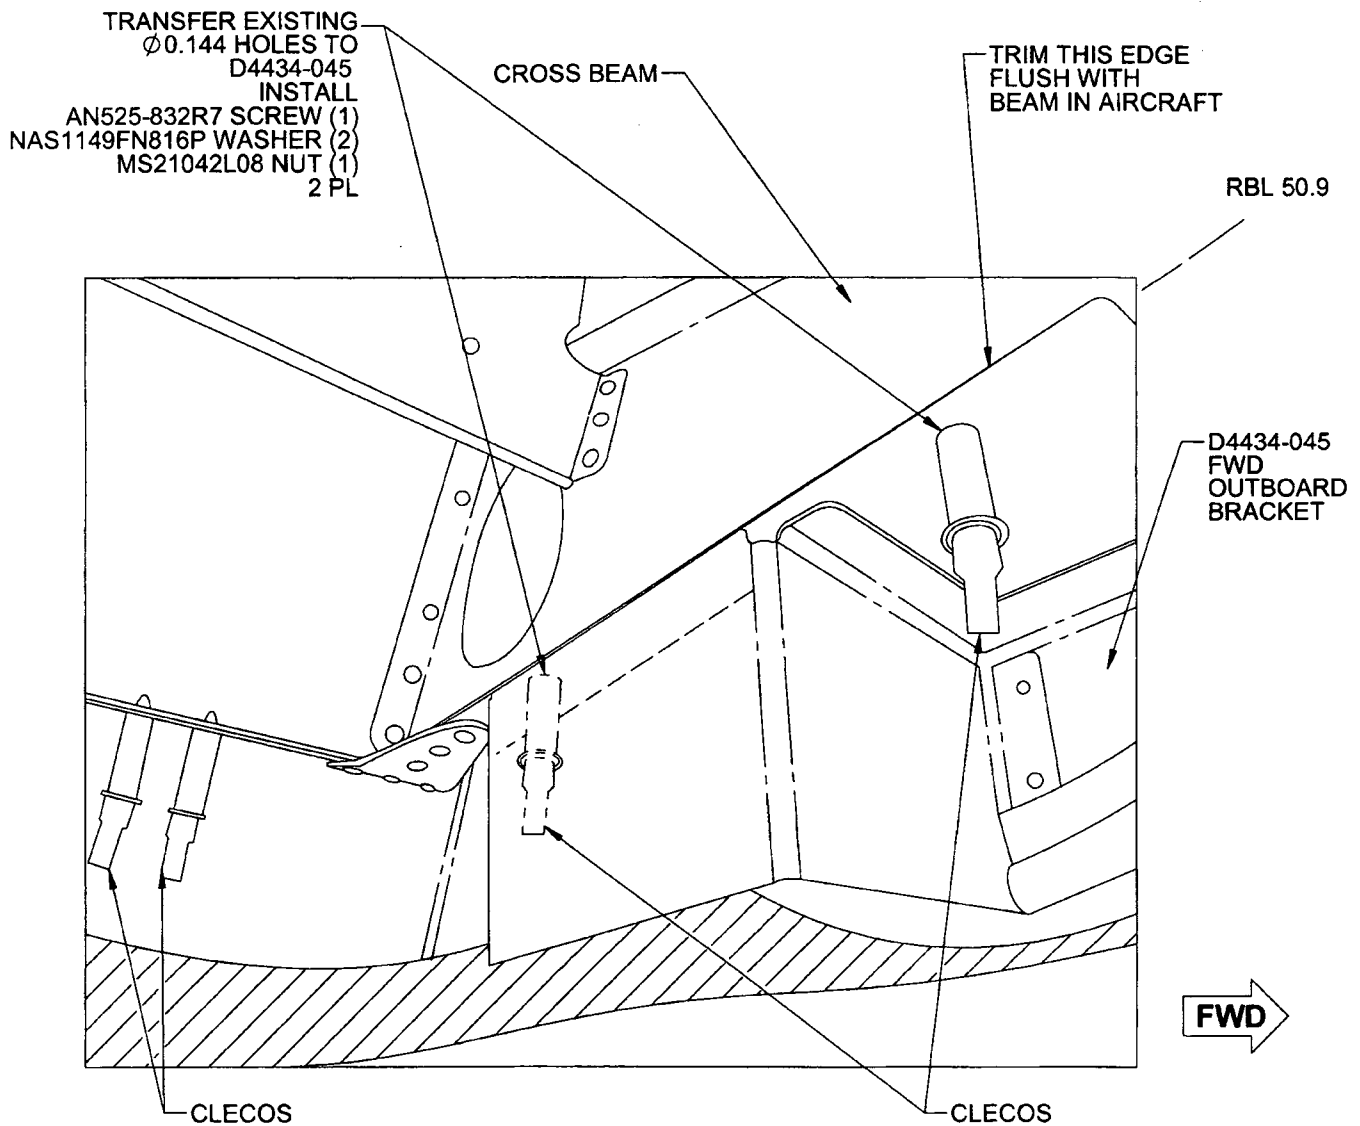


Figure 11. D4434-045 Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 13 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

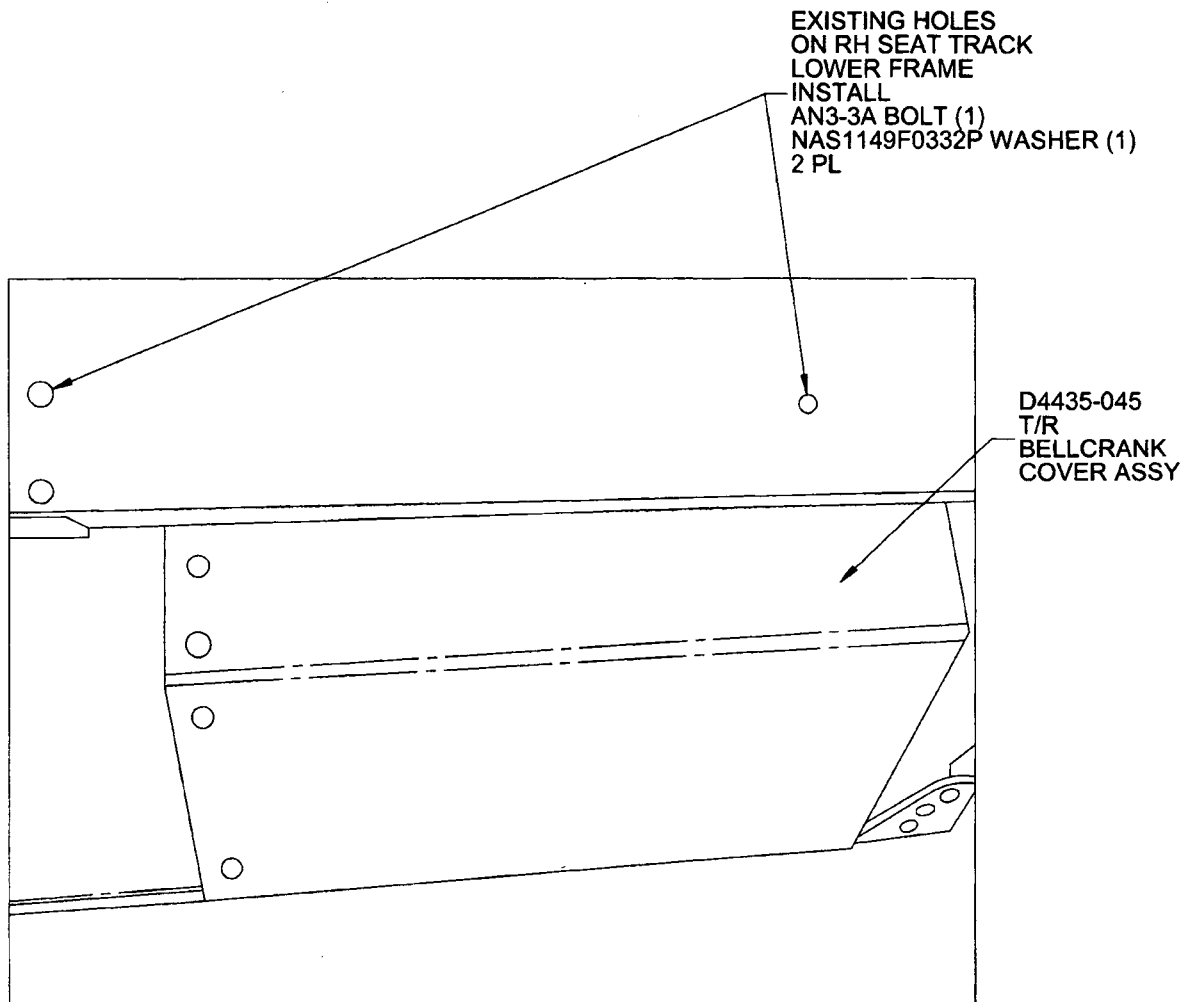


Figure 12a. D4435-045 T/R Bellcrank Cover Installation (-141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-Q-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 14 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

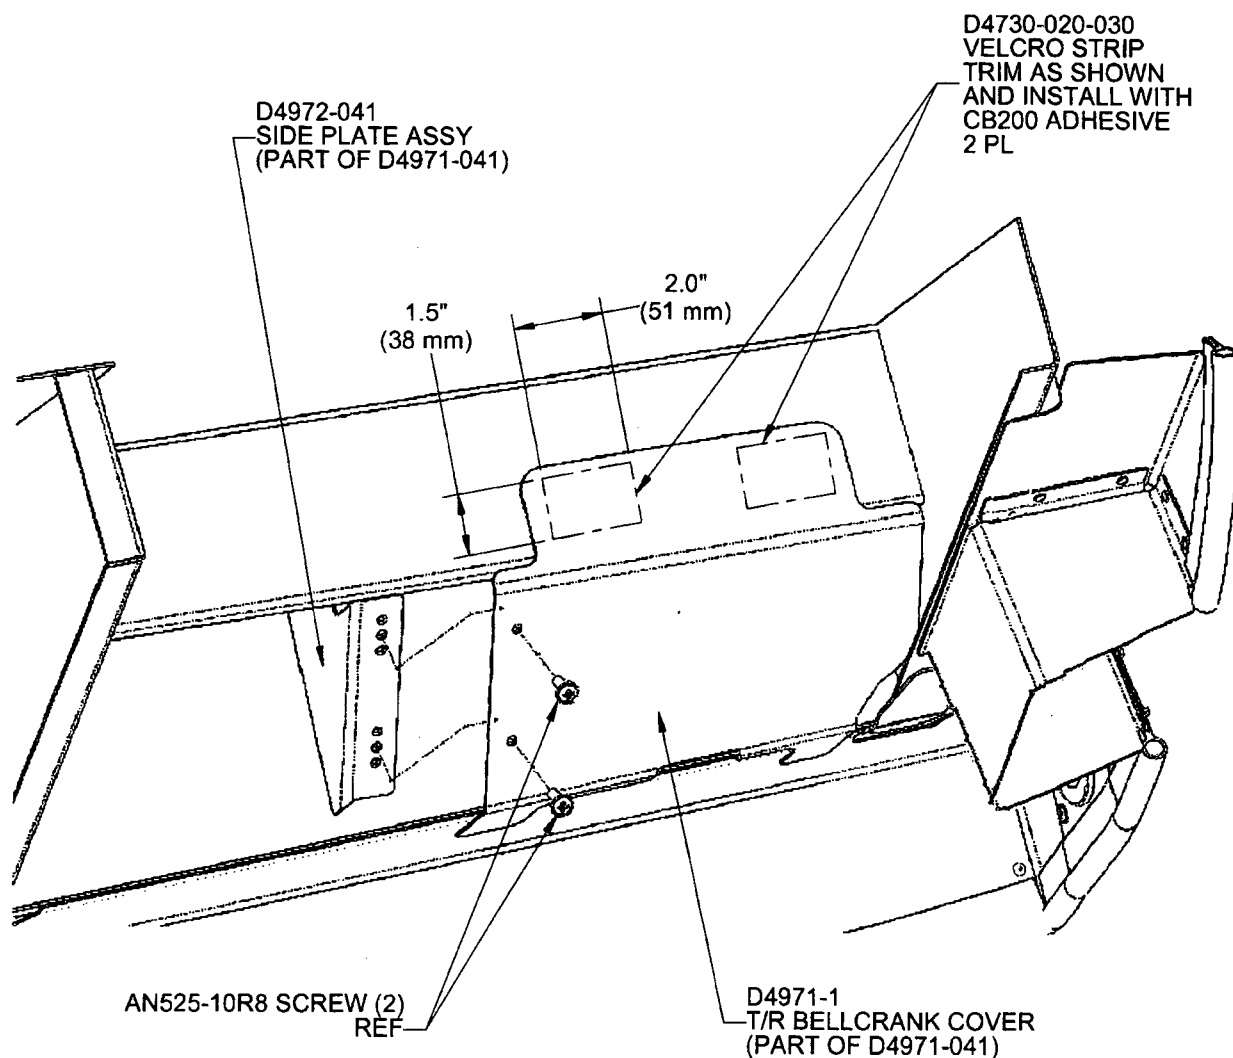


Figure 12b. D4971-041 T/R Bellcrank Cover Assy Installation (-143/-145)


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 15 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

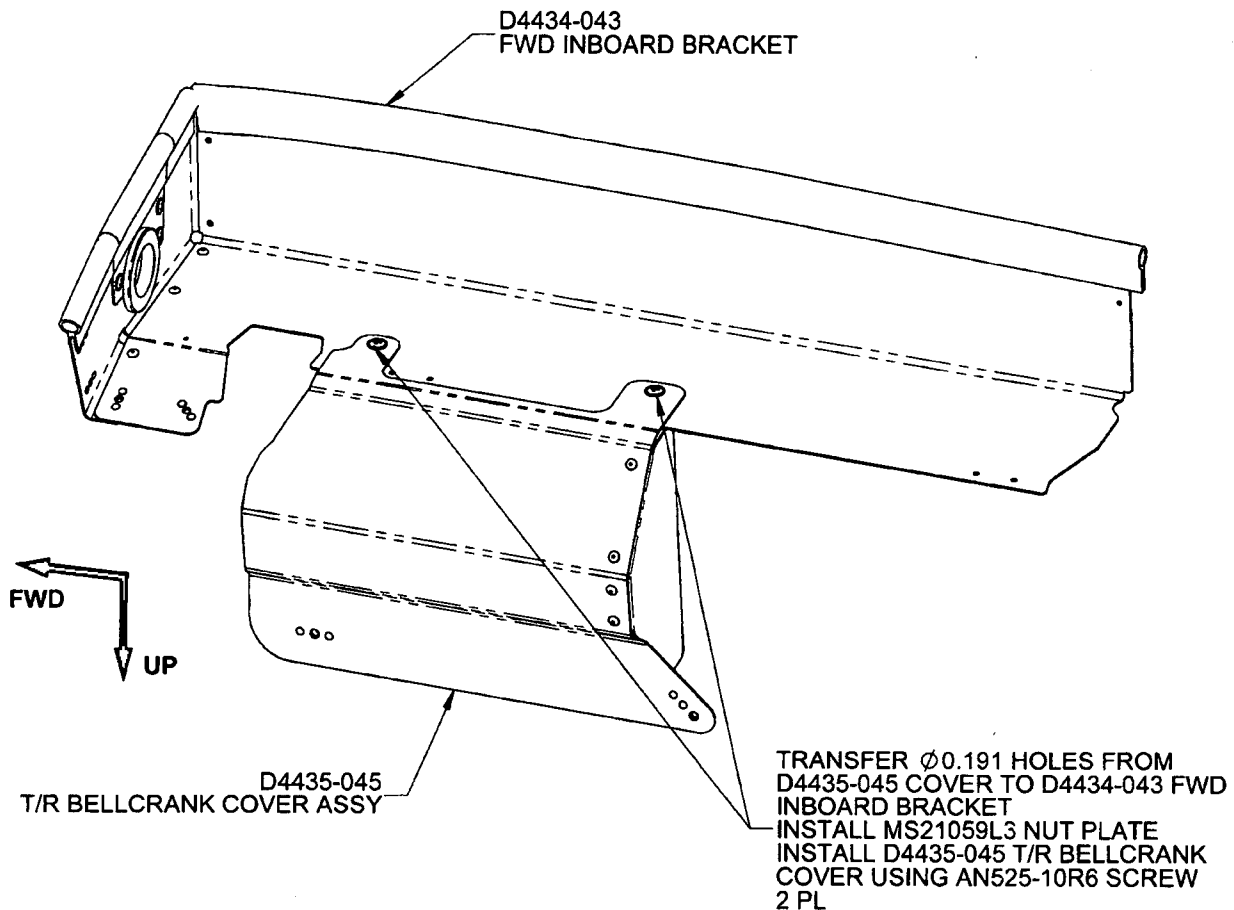

E **Figure 13a. D4435-045 Cover Installation (-141 ONLY)**


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. E
MFG. APPR.	N/A	SHEET 16 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

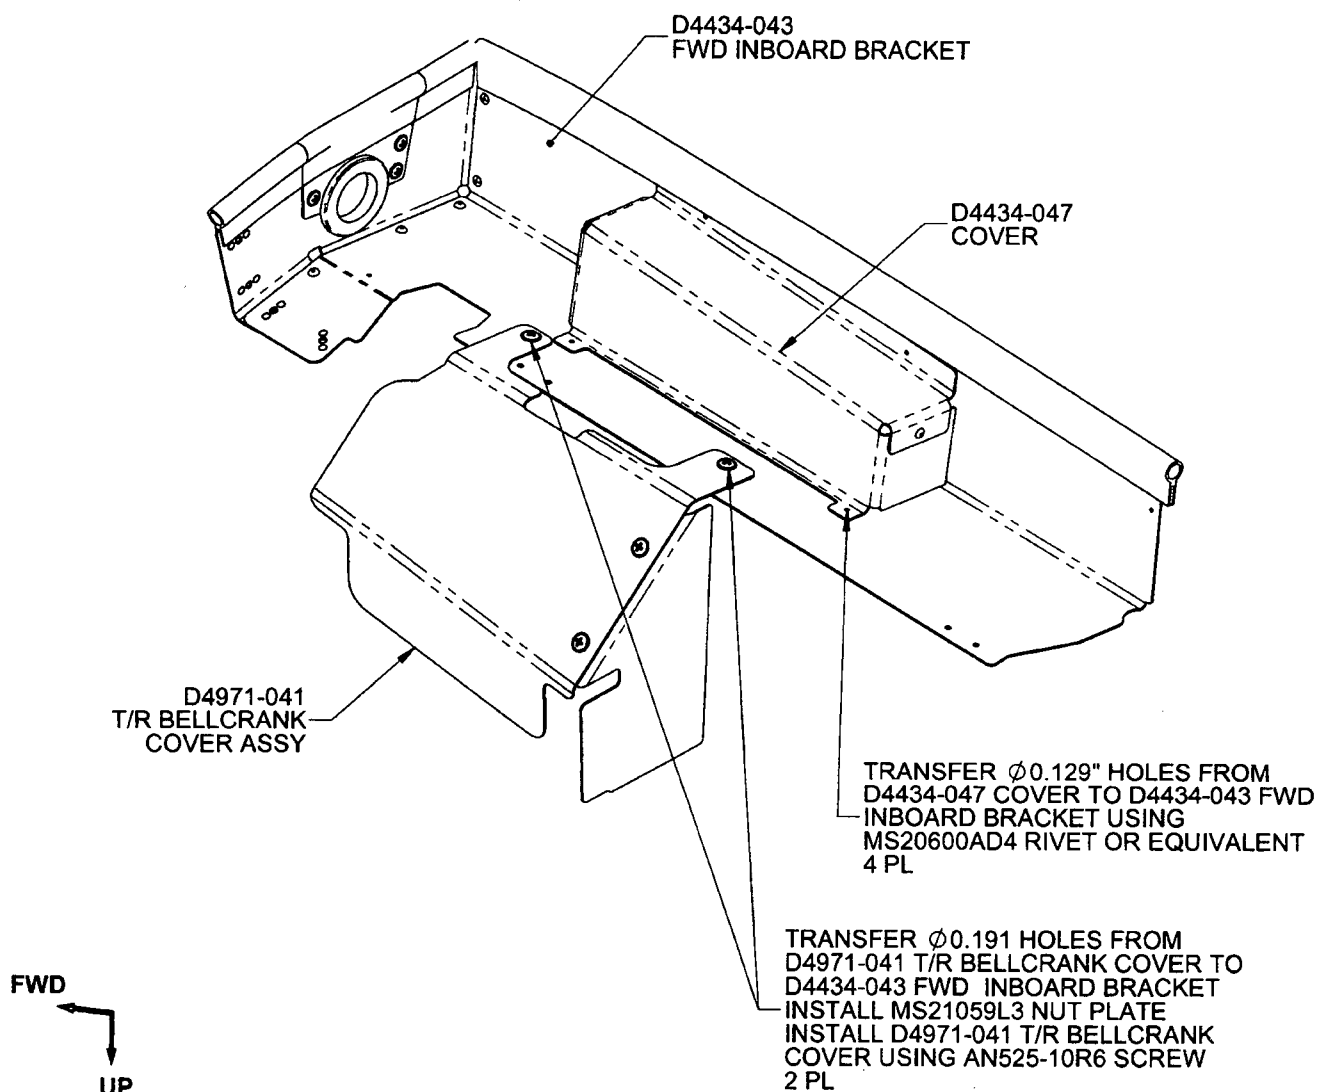

E Figure 13b. D4971-041 & D4434-047 Cover Installation (-143 ONLY)


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 17 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

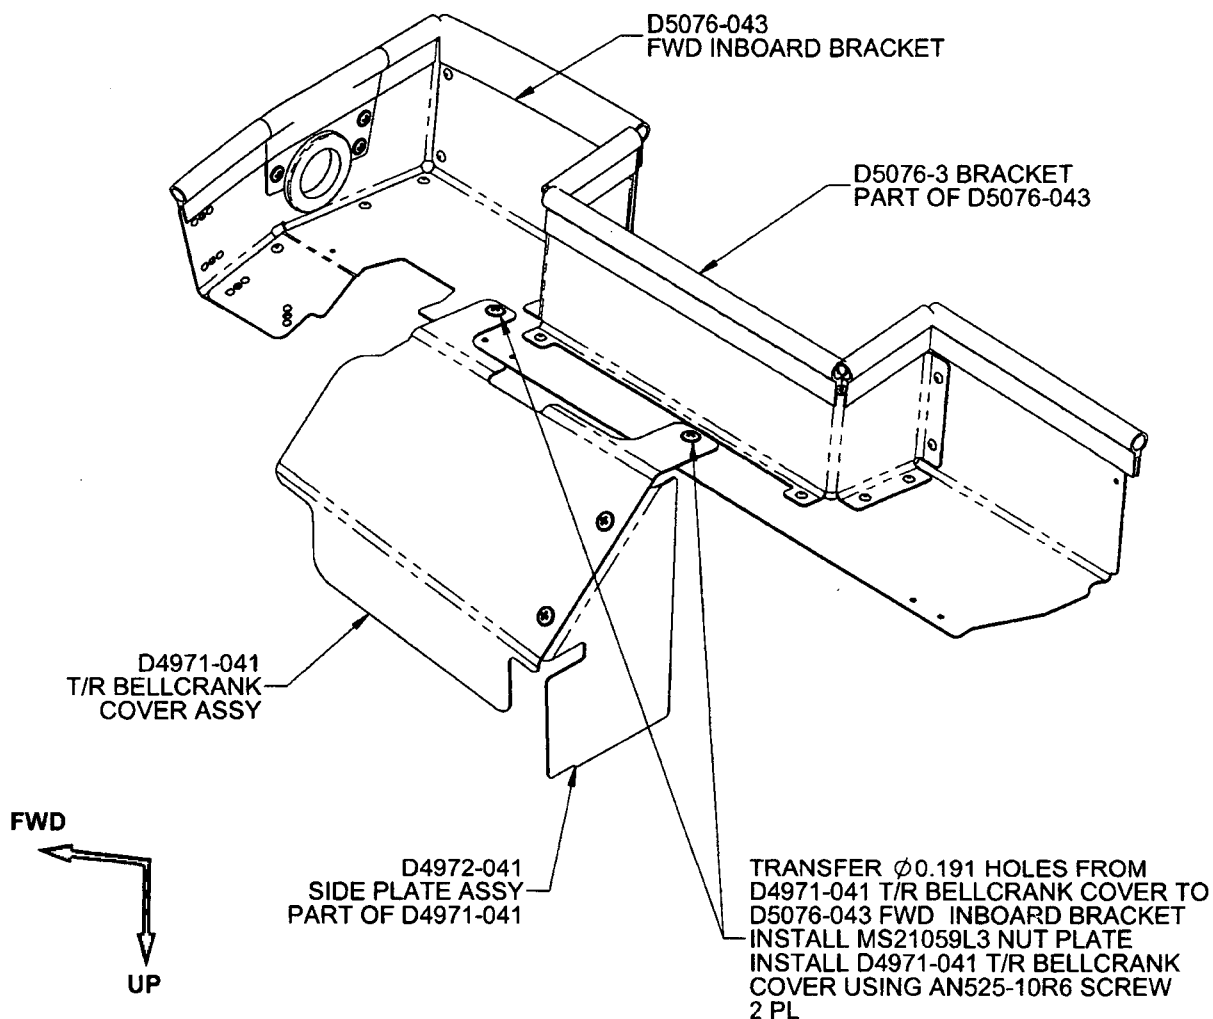

E Figure 13c. D4971-041 INSTALLATION INTO D5076-043 (-145 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. E
MFG. APPR.	N/A	SHEET 18 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

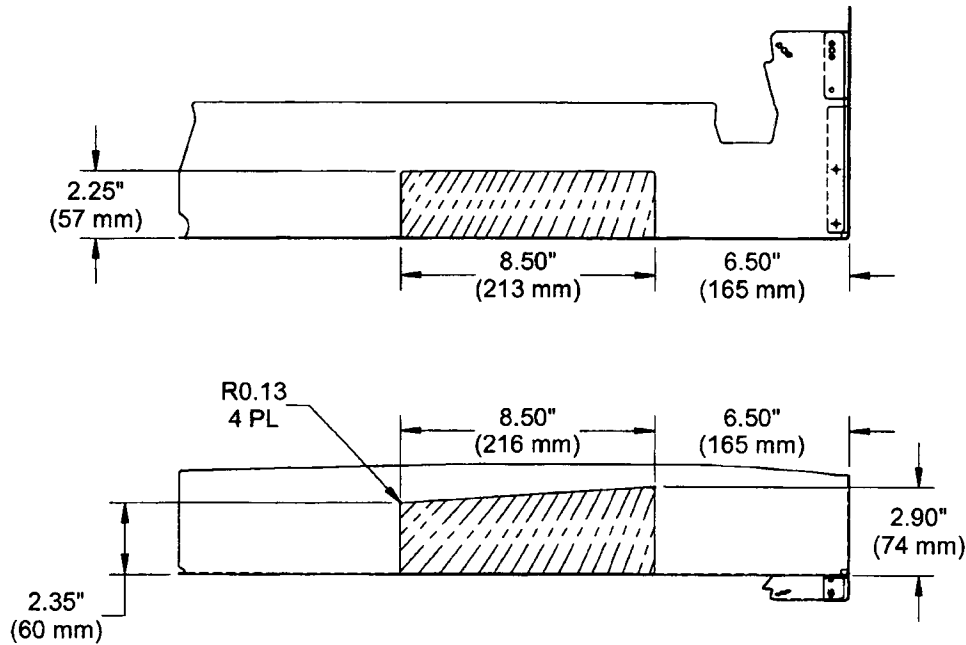
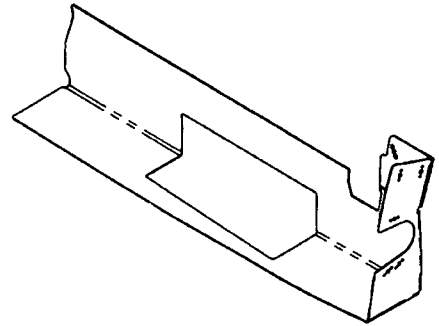


Figure 14. D4434-043 Fwd Inboard Bracket Cutout

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.03.20
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. E
MFG. APPR.	N/A	DSI 9590	SHEET 19 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	14.03.20	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kg	1.66 m	2.94 m-kg

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 D350-567-115 - OK to remove D3295-041
 D350-567-031 - OK to remove D3212-1
 D350-567-011 - OK to remove D2214
 D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	h	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	h	TITLE	SCALE
DE APPR.	h	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	